Dual Arm Boom Stand Instruction Manual



Please read the Instruction Manual carefully before installation and keep it for future use.

INSTRUCTION MANUAL

Open the package and check the parts

- 1. Base 2. Vertical post 3. Base locking screw 4. Guard Ring 5. Dual Arm Bar
- 6. Locking Screw 7. Locking Screw 8. 5/8"Adapter

Please contact the local dealer for any missing part and problem.



STEP 4: Place the Dual Arm Bar 5 in to the Vertical post.	STEP 5: Tighten the left side Screw 6.	STEP 6: Tighten the right side Screw 7, and the Dual Arm Bar is in the right position.	STEP 7: Place the 5/8"adapter in the end of the Dual Arm Bar.

STEP 8: Tighten the screw of the 5/8"adapter .	STEP 9: Put the Cap 8 on the top of the vertical post.	SPECIFICATIONS: Weight: 38.25lbs,17.35kg
		Base Dimensions: 11.22× 10.236×0.709" (285× 260×18mm)
		Maximal size from vertical post to the front of the base: 9.38"(238.25mm)
1.1944.2		Horizontal Bar: Length: 20.866"(530mm)
		Diameter: 0.787"(20mm)

Clamp Dual Arm Stand	U Base Dual Arm Stand	Big Base Dual Arm Stand
Maximal open size of	Base Dimensions (L \times W X H)	Base Dimensions:
clamp:1.575"(40mm) Weight:21.17lbs, 9.6kg	17.716X14.173X1.181"	15.512×14.961×0.472"
vveignt.z r. r/ibS, 9.6Kg	(450×360×30mm).	(394×380×12mm)
	Weight: 14.95lbs,13.46kg	Weight: 39.35lbs,18.95kg
	5	

STAND ACCESSORIES

The following parts are not included in the boom stand package. Please contact the local dealer for the parts.

76mm/83mm/85mm	39mm	Fine focus	B&L
E-Arm	E-Arm	E-Arm	E-Arm
CCD Mounting Plate	CCD Mounting Plate with Focus	76mm Through Hole Focus Rack	32mm/25mm Arbor
* •			

HOW TO ATTACH STANDARD E-ARM

On the top	On the front of Horizontal Bar	On the bottom. Warning: please use the safety screw when you put the E-Arm on the bottom of the bar.